


EP 中力

HPL152/HPL152Z
Electric Pallet Truck
Parts Manual

电动搬运车
零件目录

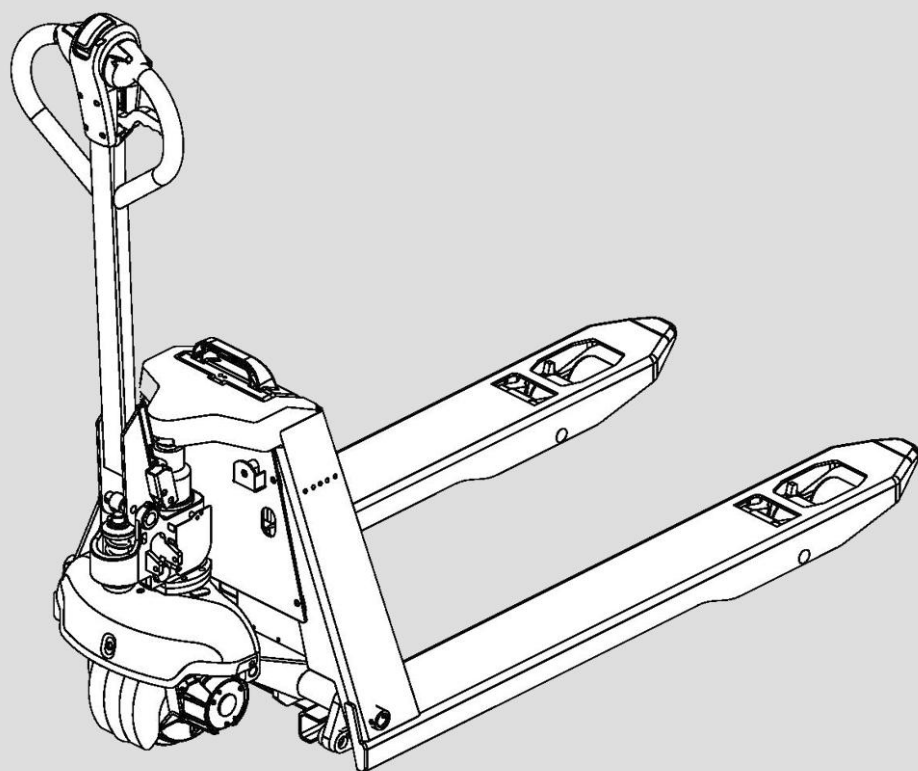

PARTS ORDERING INSTRUCTIONS

HOW TO ORDER

When you order, supply the part number, quantity, model and serial numbers of your machine. Supplying this information will assure prompt, efficient handling of your order.

Since your dealer carries many parts in stock and maintains up-to-date prices on all parts, he will be able to process your order immediately. If, for some reason, the part is not in stock, he will order it from the factory. In either event, he maintains a current file of service manuals, which give all available parts ordering or technical information.

WHERE TO ORDER

Always order parts from the dealer who sold you your truck. If it is necessary for the dealer to order parts from the factory, he is able to get prompt service for you. Parts are shipped in accordance with shipping instructions given on the order.

INSTRUCTIONS FOR RETURNING PARTS

Under NO CIRCUMSTANCES will parts be accepted at the factory for credit without prior approval. We cannot accept responsibility for parts returned without authorization.

If you have some parts which must be returned, contact your dealer. If he believes parts should be returned, he will arrange for authorization to return the parts.

CHANGES

When changes are made to the machine, revised pages for this manual will be issued. These pages must be inserted in your parts manual as soon as they are received. Failure to keep your parts manuals up to date will result in confusion and may cause you to order wrong parts.

EP EQUIPMENT CO.,LTD.

Address: XIAQUAN,DIPU,ANJI,ZHEJIANG,CHINA

Tel:400-880-2178

Net: www.ep-ep.com

Email:epparts@ep-ep.com

ALL RIGHT RESERVED COPYRIGHT

PM1128 11.19

零件订购说明

如何订购

当您订购的时候，您需要提供搬运车零件的编号，数量，型号和序列号。提供这些信息能够保证您的订购更加的高效。

因为您的经销商有很多零件的存货，而且需要保持所有零件的价格是最新的，所以他会尽快地处理您的订购需求。假如因为某些原因，存货中没有这个零件，那么他会从公司订货。无论怎么样的情况，他手里都会有一份服务手册文件，它能提供所有可用的零件的订购信息或者技术信息。

订购地点

当您需要订购零件时，请到销售给您搬运车的经销商那里订购。如果经销商有必要从公司订购零件，他能够为您提供快捷的服务。根据您的订购信息，零件和它对应的操作说明会一起装好。

零件的退还说明

一般情况下，因为信用的关系，退还的零件没有事先的同意，是不会被公司认可的。我们不会对没有经过授权但退还过来的零件负责。

如果您有一些零件一定要退还，请联系您的经销商。若经销商确认零件可以退还，则其会安排授权要退还的零件。

技术修改

当搬运车技术有修改时，这本手册的修正页会重新发行。当您拿到这些修正页时，您一定要立即把它们插入到您的零件手册中。若没有及时的更新您的零件手册，则可能会导致您订购、维护等方面的错误。

浙江中力机械有限公司

地址：浙江省安吉县递铺镇霞泉村中力园区

电话：400-880-2178

网址：www.ep-ep.com

邮箱：epparts@ep-ep.com

版权归本公司所有

GENERAL INFORMATION

INDEX

This parts manual is arranged for easy identification of parts .The index at the front of the catalog gives location of major groups and assemblies.

PART LIST

The Index, describes the item on the Figure you are looking at. The Part No. is a numerical description of the item and the part ordering number. The Part Name is a description of the part number in alphabetical form. The No.is the quantity used on the machine. The Applied Date is a description when the part is applicable.The Remark is the explanation of the part for a supplement such as the model the capability, the characteristic etc.

HOW TO READ PARTS MANUAL

HELP 1:

	Index	Part No.	Part Name	No.	Applied Date	Remark
A 	9	1120-342101-00	Button Bracket (L)	1		
	10	1120-342002-00	Horn Button	1		
		1120-342005-00	Pin	2		
		1120-342003-00	Spring	2		
		1120-342004-00	Button Bracket	1		
	11	0000-000039-00	Screw ST3.5×9.5	6		
B 	22	2108-540000-00	Bracket	1		
	23	2108-550000-00-01	Battery	2		60AH / 12V
	23	2108-550000-00-02	Battery	2		80AH / 12V
	24	0000-000378-00	Screw M4×16	2		

A: The part of Index 19 is a discreteness with two kinds of parts.It denotes **Not Sold Separately**.

B: The part of Index 23 is Optional.

	Index	Part No.	Part Name	No.	Applied Date	Remark
C →	8	Ck11-560003-00	Jc100 Switch	1		
	9 01	Ck11-520008-00	JC100 Switch Wire Harness	1		
	02	Ck11-520008-00	JC100 Switch Wire Harness	1		Superseded
	10	0000-000001-00	Screw M6X20	2		
D →	7 01	2125-410004-00	Cap	1	-071011	
	02	2125-410004-0A	Cap	1	071011-	
	8	2108-550000-00	Battery	2		
	9	0000-000378-00	Screw M4×16	2		
	10	2125-410005-00	Ring Back Up 50X45X6	1		
	11 01	0000-000197-00	Ring Packig 40X50X6	1		Old
	02	0000-000512-00	Ring Packig 40X50X6	1		New

C: The part of index 9 is improved and upgraded. Please use the **New Part Number** when ordering.

D: The part of Index 7 has an **Applicability**, because it's our policy to constantly improve our products.

The part of Index 11 is same but the Part Number is changed. And please use the new Part Number when you order this part.

1. Record by time

- 070911 : Ending on July 09, 2011.

071011- : Beginning on July 10, 2011.

2. Record by serial number

	Index	Part No.	Part Name	No.	Applied Date	Remark
D →	7 01	2125-410004-00	Cap	1	-S2016344	
	02	2125-410004-0A	Cap	1	S2016345-	
	8	2108-550000-00	Battery	2		
	9	0000-000378-00	Screw M4×16	2		
	10	2125-410005-00	Ring Back Up 50X45X6	1		
	11 01	0000-000197-00	Ring Packig 40X50X6	1		Old
	02	0000-000512-00	Ring Packig 40X50X6	1		New


-S2016344 : Ending at S2016344

S2016345- : Starting at S2016345

There are three types of serial number:


1) 1 (LETTER)+7 (NUMBERS)

Applied Date: Up to February 1,2015

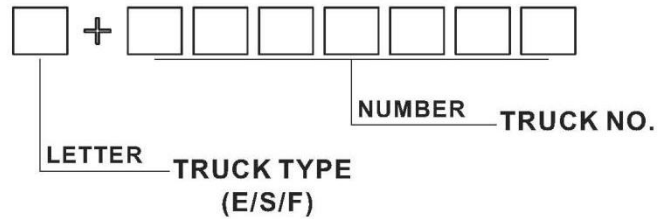


3) 1 (NUMBER)+ 8 (NUMBERS)

Applied Date: From June 1,2015

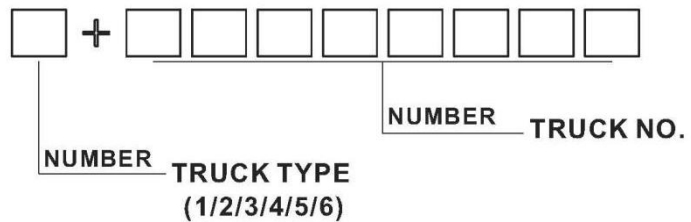


2) 1 (LETTER)+ 8 (NUMBERS)

Applied Date: From February 1,2015 to June 1,2015

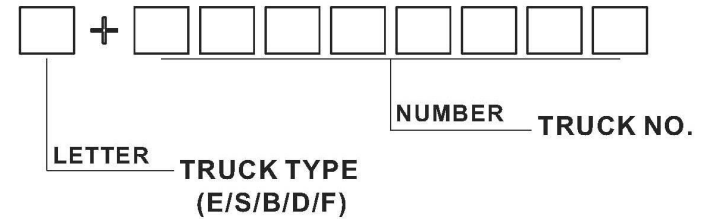

HELP 2:

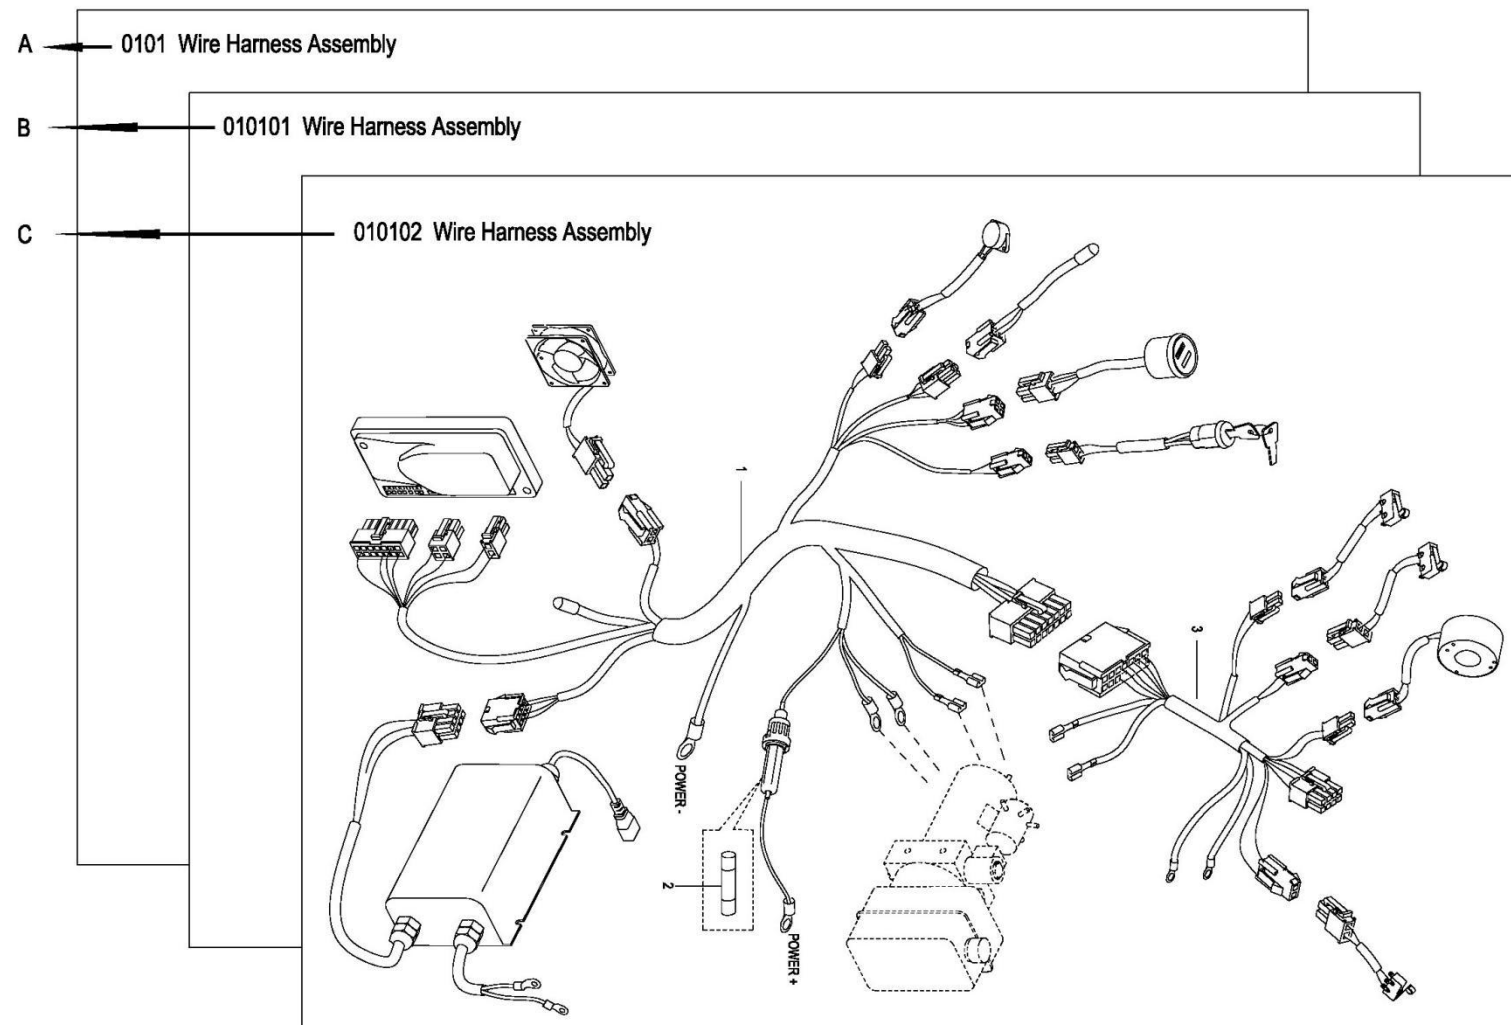

A:Section 0101 is the original version.

B:Section 010101 is the version that some parts in the Section 0503 have been changed.

C:Section 010102 is the version that some parts in the Section 050301 have been changed.

When you order, Please locate specific parts information of your truck by the Applied Date of parts in each version.

概要

目录

将零件目录分成几个易识别的部分，并把主要结构和总成放置在索引目录中。

零件明细表

Index 描述的是在插图上，您想要找的项目。**Part No.**是零件的一系列描述和它的订购号码。**Part Name** 是用文字的形式描述零件的号码。**No.**代表的是零件在搬运车上使用的数量。**Applied Date** 表示的是零件适用的时间范围。**Remark** 是用来补充说明零件信息(例如车型、性能和特征等)。

怎么读取零件明目录

帮助 1:

	Index	Part No.	Part Name	No.	Applied Date	Remark
	序号	零件编号	零件名称	数量	适用日期	备注
A	18	0000-000667-00	Bearing 61905Z	轴承	1	
	19	1115-200004-00	Helical Gear	大斜齿	1	
		1115-200005-00	Helical Gear	小斜齿	1	
	20	0000-000680-00	Bearing 16003Z	轴承	1	
B	22	2108-540000-00	Bracket	电瓶固定板	1	
	23	1115-500005-00-01	Battery	电瓶	2	65AH / 12V
	23	1115-500005-00-02	Battery	电瓶	2	85AH / 12V
	24	0000-000378-00	Screw M4×16	螺钉	2	
C	8	ck11-560003-00	JC100 Switch	拇指开关	1	
	9	01 ck11-520008-00	JC100 Switch Wire Harness	JC100 线束	1	Cancelled/取消
	02	ck11-520008-0A	JC100 Switch Wire Harness	JC100 线束	1	
	10	0000-000001-00	Screw M6×20	螺钉	2	

- A: 序号 19 表示的是一个由两种零件组成的组件，不以单件形式出售。
- B: 序号 23 表示该零件有几个品种可供您的选择。
- C: 序号 9 表示该零件进行了改进和升级，订购时请使用新的零件编码。
- D: 序号 7 表示该零件有一个适用的时间范围。这是因为我们在不断地进行产品的升级。
- 序号 11 表示的都是同一种零件，只是零件编码有所变更。因此，当您订购这类零件时，请您使用新的零件编码。

D

Index	Part No.	Part Name	No.	Applied Date	Remark	
序号	零件编号	零件名称	数量	适用日期	备注	
7	01	2125-410004-00	Cap	导向套	1	-071011
	02	2125-410004-0A	Cap	导向套	1	071011-
8		0000-000084-00	Ring Wiper 35×43×5-6.5	防尘圈	1	
9		0000-000370-00	O-ring 40×3.1	O 型密封圈	1	
10		2125-410005-00	Ring Back Up 50×45×20	支撑环	1	
11	01	0000-000197-00	Rod Packing 40×50×6	Yx 密封圈	1	Old
	02	0000-000512-00	Rod Packing 40×50×6	Yx 密封圈	1	New

1. 用时间记录

- 070911 : 截止到 2011 年 7 月 09 日

071011- : 起始于 2011 年 7 月 10 日

2. 用序列号记录

D

Index	Part No.	Part Name	No.	Applied Date	Remark	
序号	零件编号	零件名称	数量	适用日期	备注	
7	01	2125-410004-00	Cap	导向套	1	-S2016344
	02	2125-410004-0A	Cap	导向套	1	S2016345-
8		0000-000084-00	Ring Wiper 35×43×5-6.5	防尘圈	1	
9		0000-000370-00	O-ring 40×3.1	O 型密封圈	1	
10		2125-410005-00	Ring Back Up 50×45×20	支撑环	1	
11	01	0000-000197-00	Rod Packing 40×50×6	Yx 密封圈	1	Old
	02	0000-000512-00	Rod Packing 40×50×6	Yx 密封圈	1	New


-S2016344 : 截止序列号 S2016344

S2016345- : 起始序列号 S2016345

有三种序列号形式:


1) 1 (字母) + 7 (数字)

适用时间: 截止到 2015 年 2 月 1 日

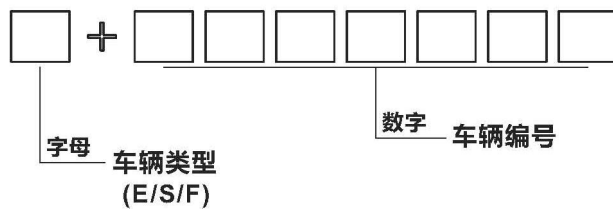


2) 1 (字母) + 8 (数字)

适用时间：2015 年 2 月 1 日至 2015 年 6 月 1 日

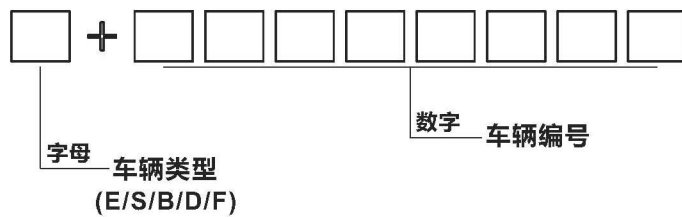


3) 1 (数字) + 8 (数字)

适用时间：2015 年 6 月 1 日至今

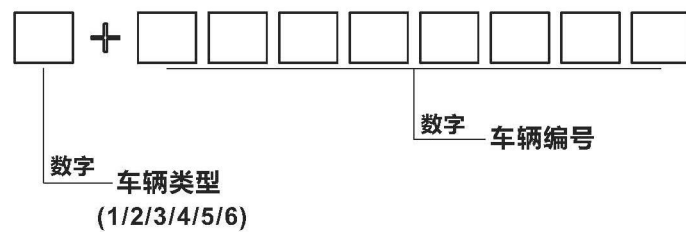

帮助 2:

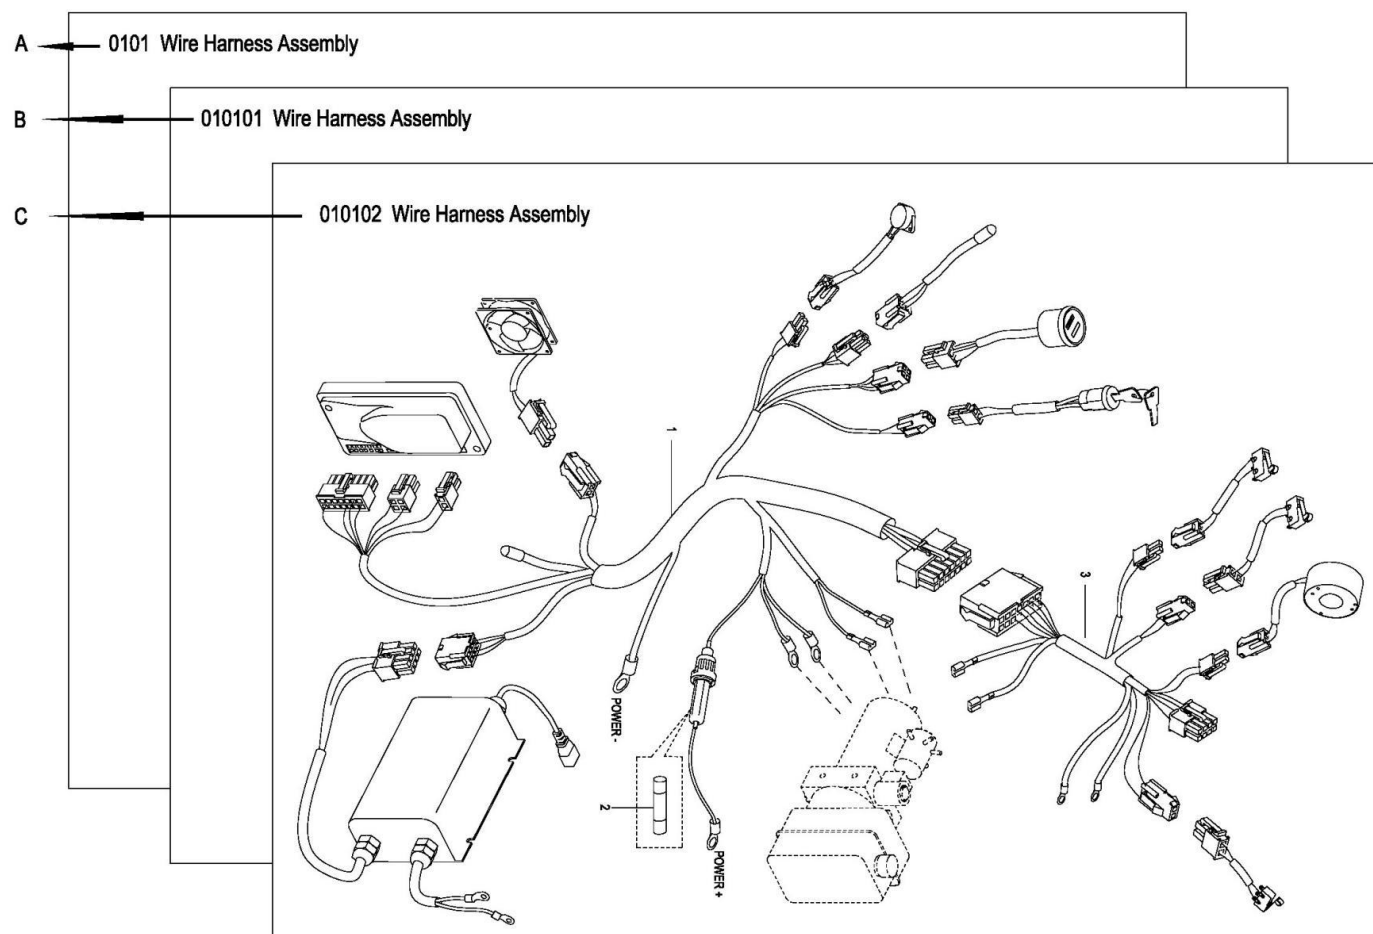


A: 章节 0503 表示原始版本;

B: 章节 050301 表示在原始版本 (章节 0503) 上零件有所变更;

C: 章节 050302 表示在变更版本 (章节 050301) 上零件有所变更。

当您订购零件时, 请根据每个版本中零件的适用时间来判断您所选购车型的零件信息。

Major Assemblies

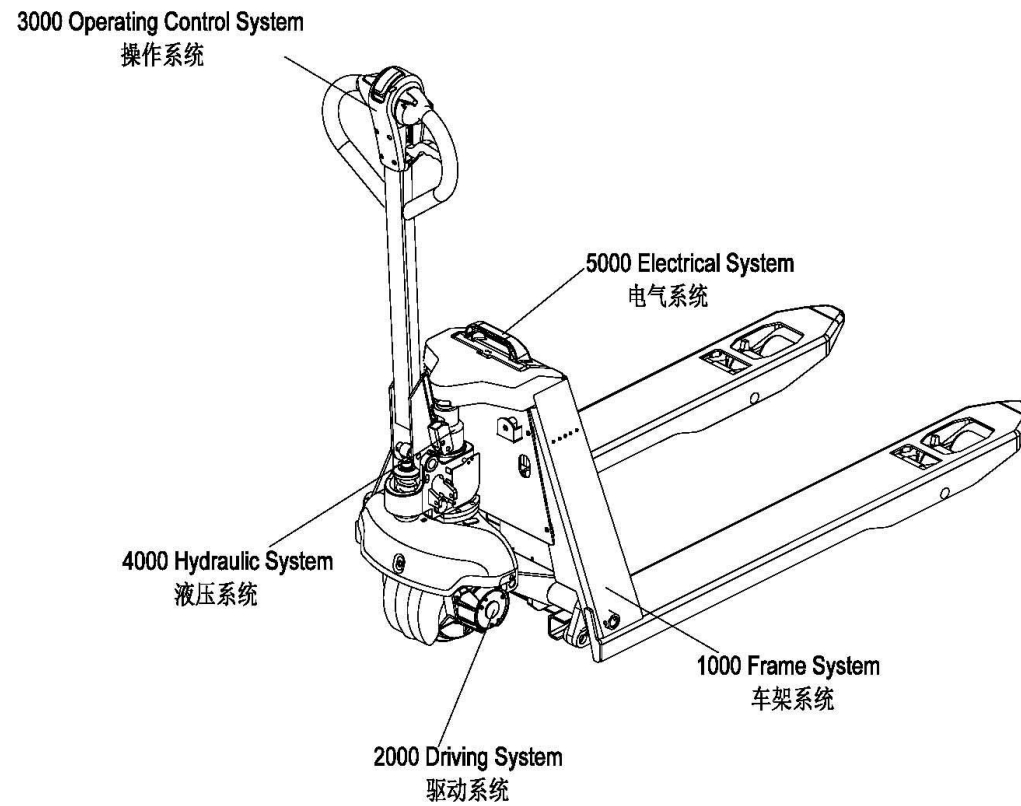

WARNING: Note that illustrations of assemblies and components may not necessarily conform to the exact installation as they appear on your truck. But this Manual can help you locate specific parts information of your truck.

注意：表达在零件目录上的总成和结构内容可能不会完全地出现在您的车型上，但是您可以在零件目录中查询到您所选购车型的零件信息。

Index

目录

1000 Frame System 车架系统.....	1
0101 Frame Assembly 车身系统.....	2
0102 Cover 外罩.....	5
2000 Driving System 驱动系统.....	7
0201 Driving System 驱动系统.....	8
3000 Operating Control System 操作系统.....	11
0301 Operating Control System 操作系统.....	12
0302 Handle head assembly 手柄头总成.....	14
4000 Hydraulic System 液压系统.....	16
0401 Hydraulic System 液压系统.....	17
5000 Electrical System 电气系统.....	20
0501 Electrical Assembly 电气总成.....	21
0502 Battery Assembly 电池总成.....	24
0503 Wiring Harness 线束.....	26
0504 Cable Assembly 电缆总成.....	28
0505 Charger Assembly 充电器总成.....	30

1000
Frame System
车架系统

车身系统





0101 Frame Assembly

车身系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	1128-110000-D0-01	Front Frame 车架	1		W=540mm L=1150mm
1	1128-110000-D0-02	Front Frame 车架	1		W=540mm L=800mm
1	1128-110000-D0-03	Front Frame 车架	1		W=540mm L=1000mm
1	1128-110000-D0-04	Front Frame 车架	1		W=540mm L=1220mm
1	1128-110000-D1-01	Front Frame 车架	1		W=685mm L=1150mm
1	1128-110000-D1-02	Front Frame 车架	1		W=685mm L=800mm
1	1128-110000-D1-03	Front Frame 车架	1		W=685mm L=1000mm
1	1128-110000-D1-04	Front Frame 车架	1		W=685mm L=1220mm
2	0000-000011-00	Bushing 2015 轴套	2		
3	1113-130002-00	Short Shaft 短销轴	2		
4	0000-000708-00	Pin $\phi 5 \times 35$ 弹性圆柱销	14		
5	1128-131200-00	Down Link 右连杆	1		W=540mm
5	1128-131200-10	Down Link 右连杆	1		W=685mm
6	0000-001629-00	Bushing1615 轴套	2		
7	1114-133000-00	Wheel Assembly 承载轮总成, 双轮	2		Double Wheel
8	1125-130001-0A	Shaft 支撑轴	2		W=540mm
8	1125-130001-10	Shaft 支撑轴	2		W=685mm
9	1121-130003-00	Shaft 连杆轴	2		
10	1114-133001-00	PU Wheel PU 轮	4		Double Wheel
11	1115-130007-0A	Shaft 承载轮销轴	4		Double Wheel
12	1128-131100-00	Down Link 左连杆	1		W=540mm
12	1128-131100-10	Down Link 左连杆	1		W=685mm
13	1114-13300X-10	Wheel Assembly 承载轮总成, 单轮	2		Single Wheel
14	1114-130002-00	Shaft 轮架安装轴	6		
15	1115-130008-0A	Washer 加高转子	2		

16		1121-132001-0A	Connector	连杆头	2		
17	01	0000-000101-00	Nut M22×1.5	螺母	2		Superseded by 1121-132010-00
	02	1121-132010-00	Nut M22×1.5	薄螺母	2		
18		1121-132200-0E-02	Long Rod	长杆	2		L=800mm
18		1121-132200-0E-09	Long Rod	长杆	2		L=1000mm
18		1121-132200-0E-11	Long Rod	长杆	2		L=1150mm
18		1121-132200-0E-12	Long Rod	长杆	2		L=1220mm
19		1115-130003-0A	Shaft	长连杆安装轴	2		
20		1114-130020-00	Wheel Bracket Assembly	轮架总成，双轮	2		Double Wheel
20		1115-13000X-00	Wheel Bracket Assembly	轮架总成，单轮	2		Single Wheel
21		202801900061	Bushing 2015F	翻边轴套	4		
22		1114-133001-10	PU Wheel	PU 轮	2		Single Wheel
23		0000-000020-00	Bearing	轴承6204	8		
24		1115-130007-40	Shaft	承载轮销轴	2		Single Wheel
25		1115-130006-0B	Splint	夹板	4		
26		0000-001023-00	Round Pin ø4x35	弹性圆柱销	8		
27		1121-132000-0E-02	Connecting Link	连杆总成	2		L=800mm
27		1121-132000-0E-09	Connecting Link	连杆总成	2		L=1000mm
27		1121-132000-0E-11	Connecting Link	连杆总成	2		L=1150mm
27		1121-132000-0E-12	Connecting Link	连杆总成	2		L=1220mm
28		1114-130005-00	Wheel Bracket	轮架，双轮	2		
29		1115-130005-4B	Wheel Bracket	轮架，单轮	2		

0102 Cover
外罩

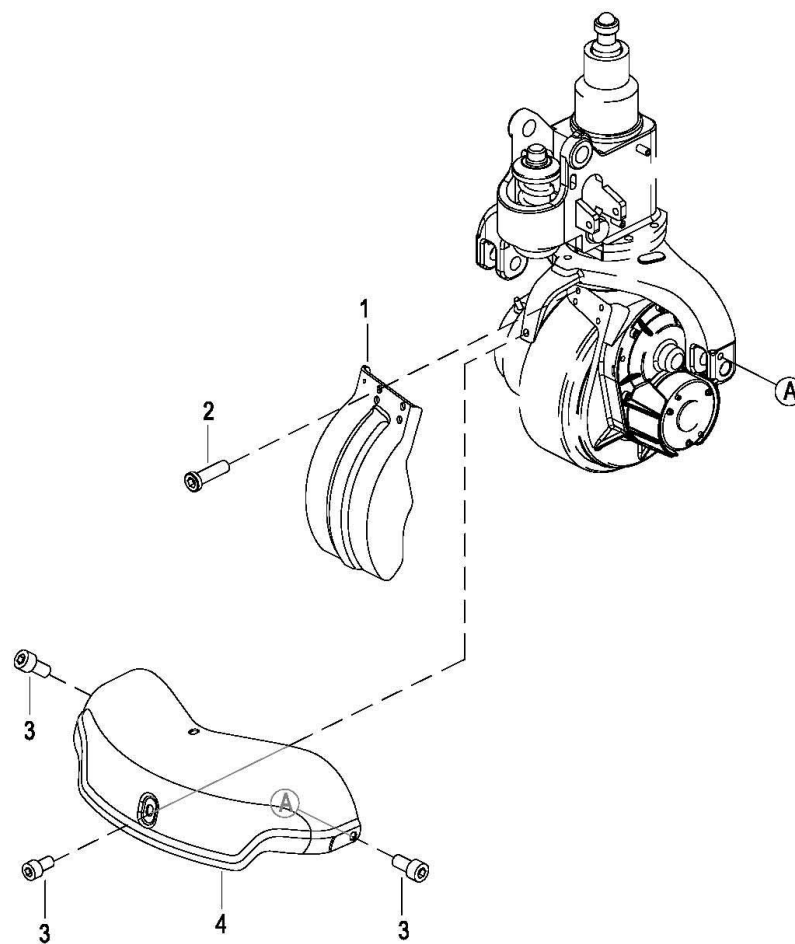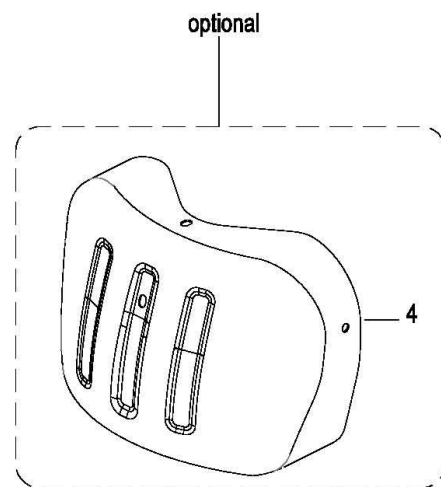

0102 Cover


外罩

Index 序号		Part No. 零件编号	Part Name 零件名称		No. 数量	Applied Date 适用日期	Remark 备注
1		1113-221102-E0	Driving Wheel Baffle	驱动轮挡板	1		
2		0000-001030-00	Screw M6x8	螺钉	4		
3		202800000141	Screw M8x12	螺钉	3		
4		1113-220002-E0	Driving Cover	驱动罩	1		
4		1113-220003-E0	Driving Cover	驱动罩	1		Optional

2000
Driving System
驱动系统

0201 Driving System

驱动系统

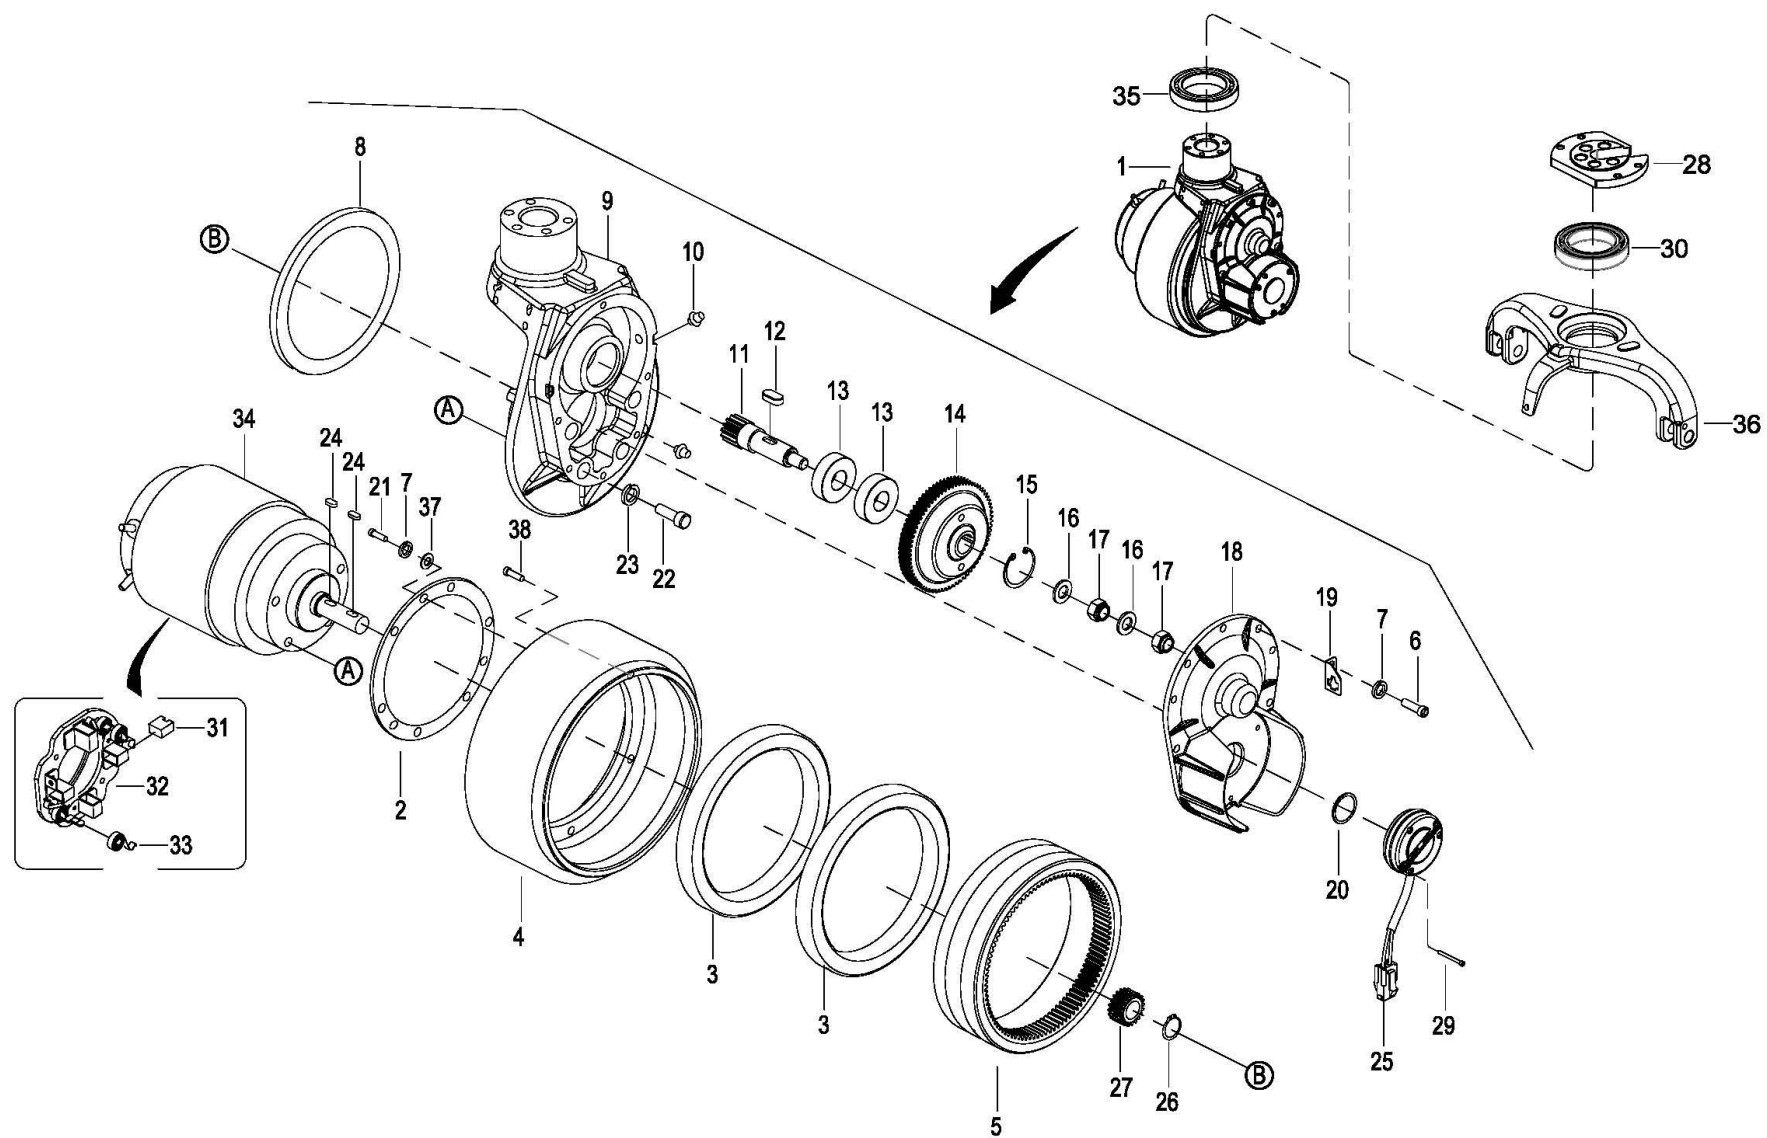

0201 Driving System

驱动系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	ZL10-200000-E1	Driving Assembly 驱动总成	1		
2	ZL10-200007-00	Bearing Baffle 轴承挡板	1		
3	309001000011	Bearing 61824 轴承	2		
4	ZL10-210000-00	Driving Wheel 驱动轮	1		
5	ZL10-200004-00	Inner Gear Ring 内齿圈	1		
6	0000-000055-00	Screw M6×16 螺钉	1		
7	0000-000056-00	Lockwasher ø6 弹垫	9		
8	0000-000670-00	Seal Ringø155×172×10 密封圈	1		
9	ZL10-200005-E0	Gear Case 箱体	1		
10	0000-000013-00	Grease Fitting M8×1×10 直通式压注油杯	2		
11	ZL10-200003-00	Small Straight Teeth 小直齿	1		
12	0000-001020-00	Key 5×5×16 平键	1		
13	309001000042	Bearing 6203RS 轴承	2		
14	ZL10-200001-00	Large Helical Teeth 大斜齿	1		
15	305002000023	Circlips For Holes ø40 孔用挡圈	1		
16	0000-000071-00	Flatwasher ø10 平垫	1		
17	0000-000425-00	Nut M10 六角薄螺母	1		
18	ZL10-200006-A0	Gear Cover 箱盖	1		
19	1115-200020-00	Plate 接插件固定板	1		
20	0000-000671-00	Seal ø16×28×7 密封圈	1		
21	0000-000015-00	Screw M6×10 螺钉	3		
22	0000-000026-00	Screw M8×30 螺钉	4		
23	0000-000159-00	Lockwasher ø8 弹垫	6		
24	0000-001021-00	Key 5×5×10 平键	1		
25	BR01-520000-10	Brake Assembly 制动器总成	1		

26		ZL10-200002-00	Small Helical Teeth	小斜齿	1		
27		0000-000659-00	Circlips for shaft ø15	轴用弹性挡圈	1		
28		1128-200001-D0	Connecting Plate	连接板	1		
29		0000-000665-00	Screw M4×45	螺钉	3		
30		0000-001230-00	Bearing51113	推力球轴承51113	1		
31		1115-250001-00	Brush	碳刷	4		
32		1115-250003-00	Holder Brush	碳刷架	1		
33		1115-250002-00	Brush Spring	碳刷弹簧	4		
34		ZL10-220000-10	Motor	电机	1		
35		309001000028	Bearing6013-2RS	深沟球轴承	1		
36		1113-220001-E0	Bridge	承载桥	1		
37		0000-000380-00	Flatwasher ø6	平垫	3		
38		1115-200022-D0	Screw M6×25	螺钉	6		


3000

Operating Control System

操作系统

0301 Operating Control System

操作系统

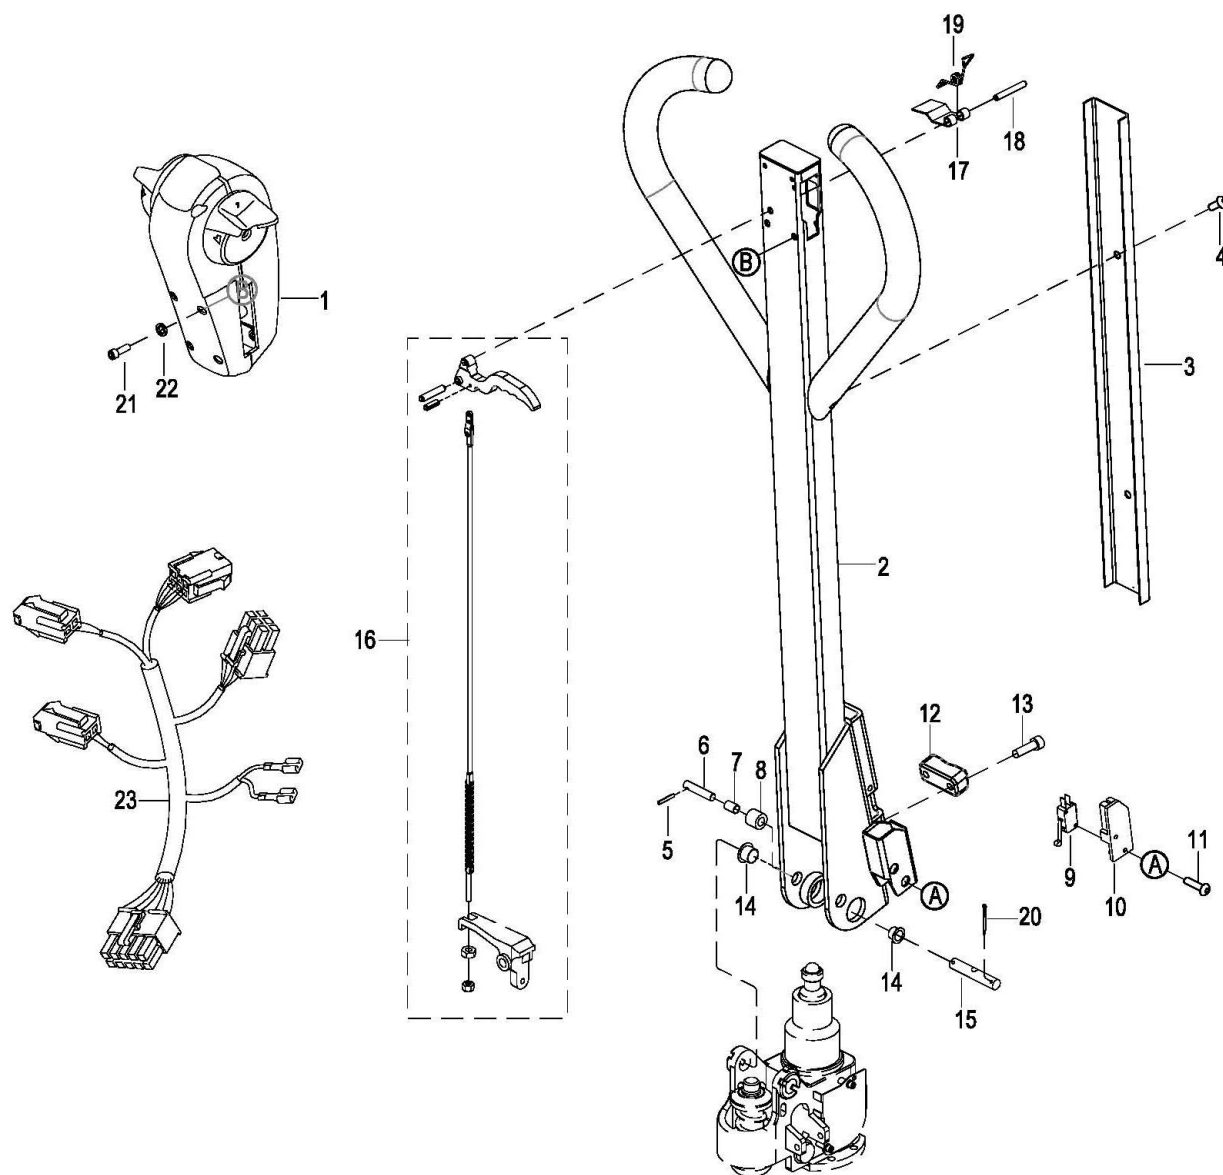


0301 Operating Control System

操作系统

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
0	1128-30000Z-00-E0	Control Handle Assembly 手柄管总成	1		Except #15, #20
1	1128-310000-D0	Control Pod Assembly 手柄头总成	1		With wire
2	1122-320000-bB	Control Handle 手柄方管	1		
3	1122-300001-b0	Groove 压线槽	1		
4	0000-000179-00	Screw M6x10 螺钉	2		
5	0000-001233-10	Pinc4x20 弹簧销	2		
6	1121-300002-00	Shaft 压轮轴	1		
7	1121-300003-00	Roller 压轮	1		
8	202801900010	Bushing12x14x20 自润滑轴套	1		
9	1115-500017-00	Limit Switch 起升限位开关	1		
10	1115-500014-00	Bracket 起升限位开关安装件	1		
11	302000000255	Screw M3×16 螺钉	2		
12	1121-300005-00	Buffer Block 手柄缓冲块	1		
13	302001000016	Screw M6x12 螺钉	2		
14	202801900061	Bushing2015F 翻边轴套	2		
15	1121-300004-0B	Shaft 销轴	1		
16	1113-31300X-00	Rod assembly 拉杆组件	1		
17	1121-330001-00	Leaf Spring 弹簧片	1		
18	0000-000679-00	Round Pin ø4×30 弹性圆柱销	1		
19	1121-330002-00	Torsional Spring 扭簧	1		
20	0000-001232-10	Cotter Pin ø4×50 开口销	2		
21	0000-001029-00	Screw M4×12 螺钉	2		
22	0000-000122-00	Lockwasher ø4 弹垫	2		
23	1128-520002-D0	Bend Wire 弯管线束	1		

0302 Handle head assembly

手柄头总成

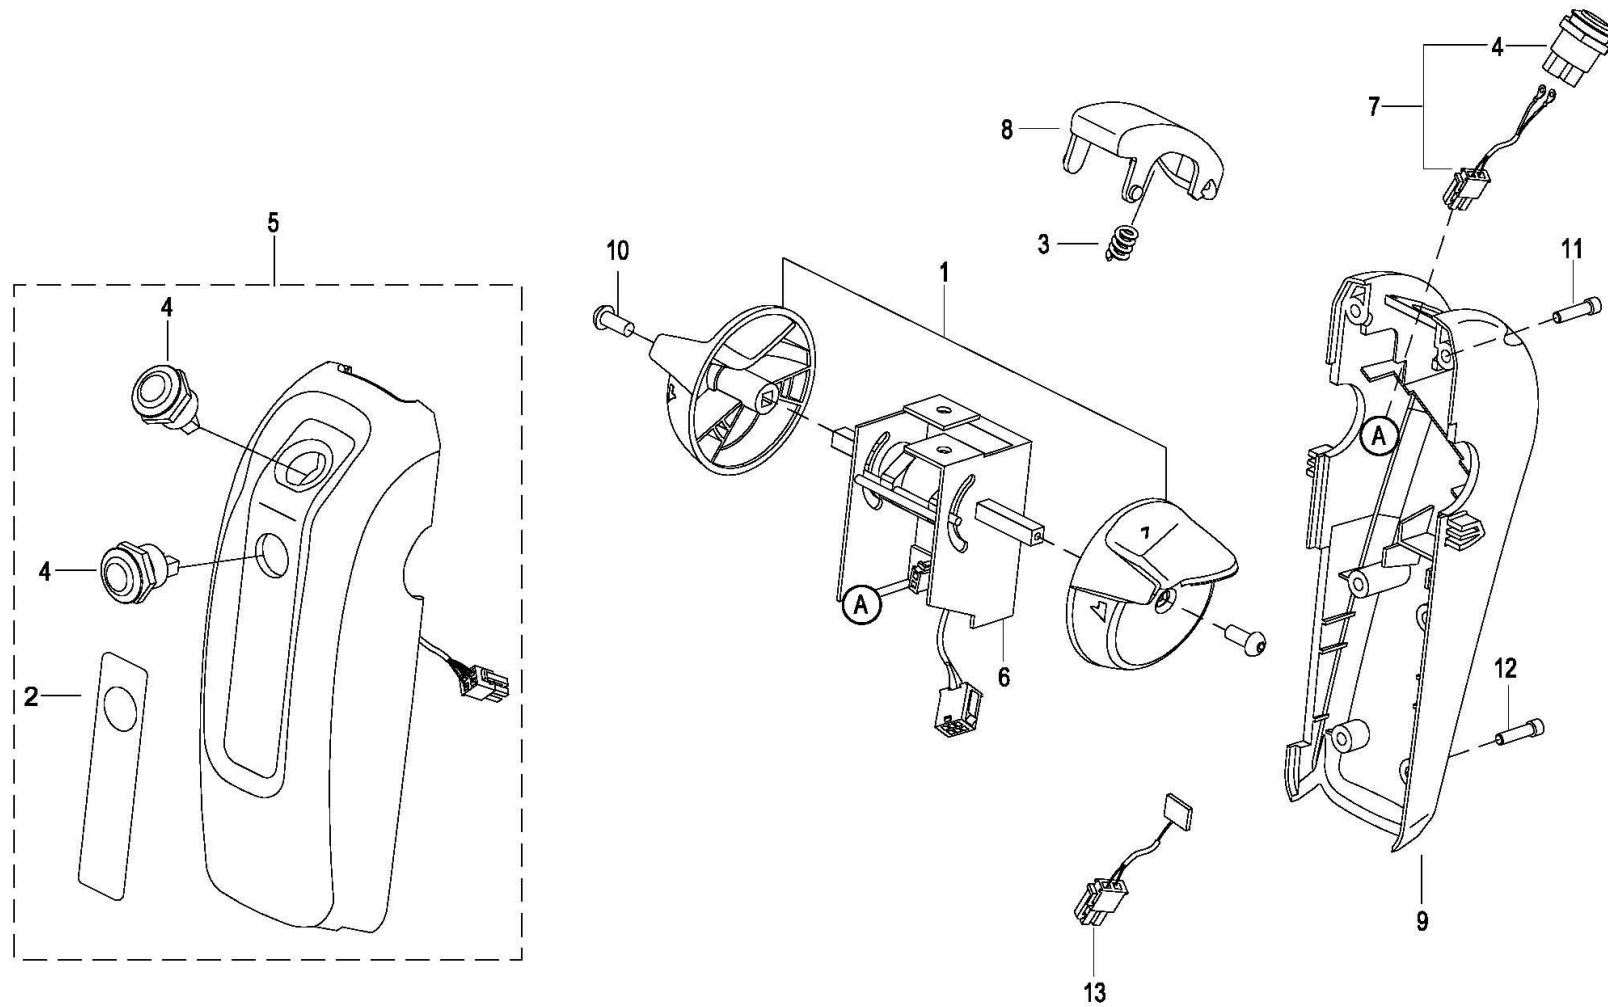

0302 Handle head assembly

手柄头总成

Index		Part No.	Part Name		No.	Applied Date	Remark
1		1113-30100X-00	Left Switch	旋钮总成	1		
2		1128-310001-D0	Button Label	手柄按钮标贴	1		
3		1113-301006-00	Spring	弹簧	1		
4		1121-522000-00	Button	按钮	2		
5		1113-301004-00	Cap Assembly	上盖总成	1		With wire
6		2YL012250883	Accelerator	加速器	1		
7		1113-520005-E0	Reverse Wire	紧急反向按钮线束	1		Including #4
8		1113-301002-00	Button Reverse Cover	反向板	1		
9		1113-301005-E0	Cover	下盖	1		
10		0000-001722-00	Screw M3 × 12	螺钉	2		
11		0000-000665-00	Screw M4×45	螺钉	2		
12		0000-001031-00	Screw M4×30	螺钉	2		
13		1113-520004-E3	Charging Can Walk Wire	直立行走开关线束	1		optional



4000

Hydraulic System

液压系统

0401 Hydraulic System

液压系统

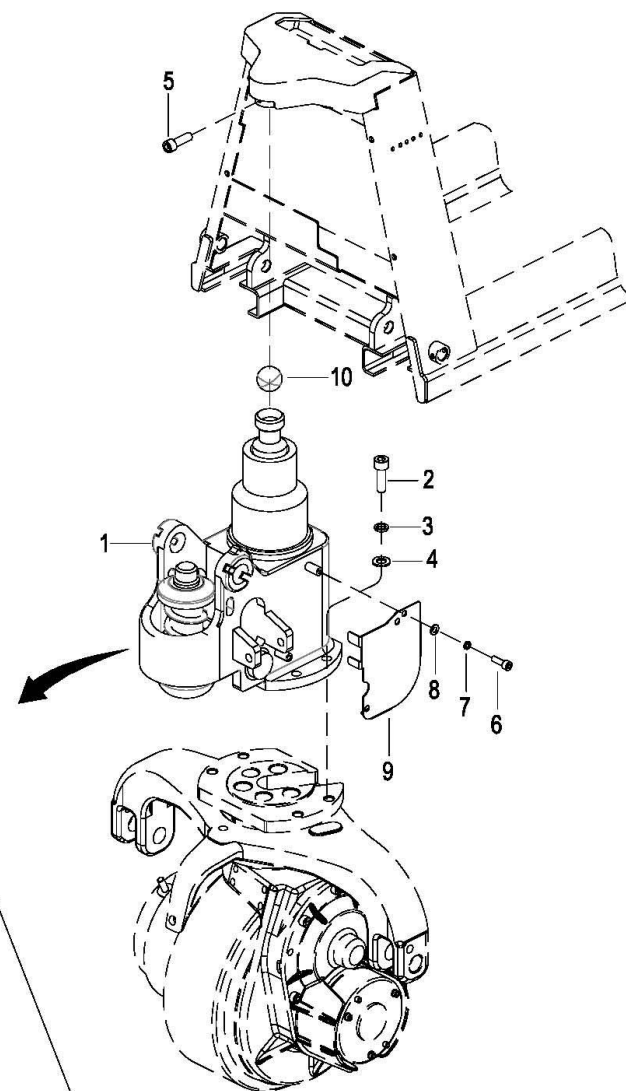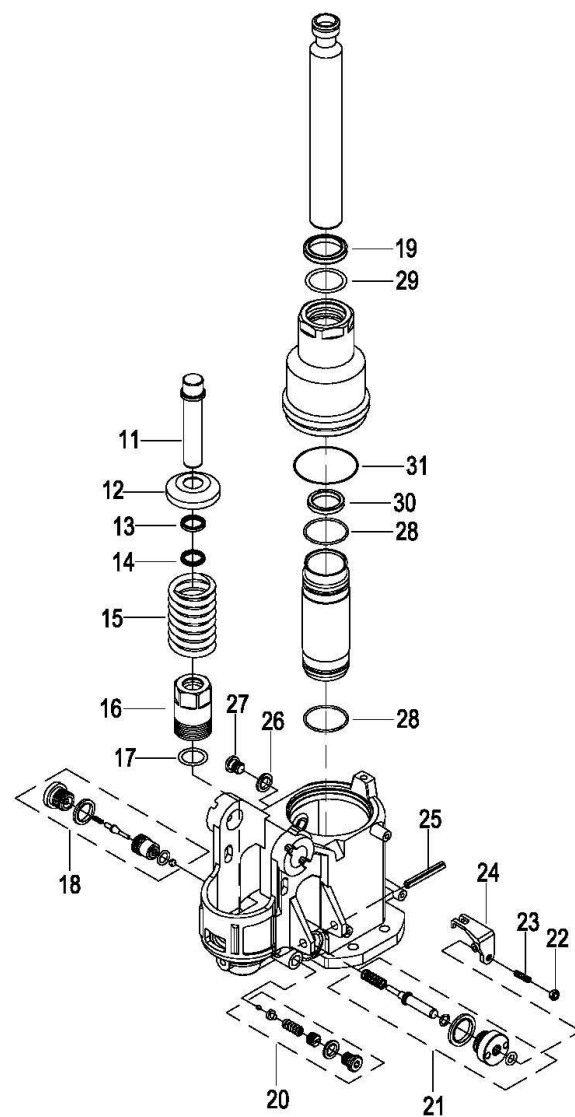

0401 Hydraulic System

液压系统


Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	1122-410000-B0	Hydraulic Assembly 液压动力单元	1		
2	0000-000151-00	Screw M8×25 螺钉	4		
3	0000-000159-00	Lockwasher ø8 弹垫	4		
4	0000-000176-00	Flatwasher ø8 平垫	4		
5	0000-000077-00	Screw M6×12 螺钉	1		
6	0000-000117-00	Screw M5×10 螺钉	2		
7	304000000020	Lockwasher ø5 弹垫	2		
8	304000000007	Flatwasher ø5 平垫	2		
9	1122-140001-0C	Cover 油缸侧罩	1		
10	1121-410001-00	Ball S φ 19 钢球	1		
11	1121-410007-00	Pressure Bar 压杆	1		
12	1121-410008-00	Spring Cover 压簧盖	1		
13	1121-410015-00	Ring Wiper 18 防尘圈	1		
14	1121-410016-00	YX-seal 18 YX 密封圈	1		
15	1121-410009-00	Spring 压簧	1		
16	1122-41001X-B0	Pump Cylinder 双联泵缸	1		
17	1122-41002X-B0	Washer ø34.2×29×1.5 金属垫	1		
18	1121-410014-00	Control Valve 控制阀	1		
19	1121-410017-00	Ring Wiper 32 防尘圈	1		
20	1121-410013-00	Relief Valve 安全阀	1		
21	1121-410012-00	Unloading Valve 卸荷阀	1		
22	0000-000108-00	Nut M6 螺母	1		
23	1121-410011-00	Rod 泄压顶杆	1		
24	1121-410010-00	Pressure Release Lever 泄压杠杆	1		
25	0000-001237-10	Pin 8×45 弹性圆柱销	1		

26		1122-41005X-B0	Seal ø10	密封垫圈	1		
27		1122-41006X-B0	Screw M10×1	密封螺钉	1		
28		1121-410020-00	O-ring 37.5×2.65	O 型圈	2		
29		1121-410018-00	O-ring 32×3.55	O 型圈	1		
30		1121-410019-00	seal 32	密封圈	1		
31		1121-410021-00	O-ring 65×2.65	O 型圈	1		
KIT		1128-ZZG-0A	Seal Kit For Hydraulic Assembly (include item 13,14,17,19,28,29,30,31)	起升泵修理包（包含零件 13,14,17,19,28,29,30,31）	1		

5000
Electrical System
电气系统

0501 Electrical Assembly

电气总成

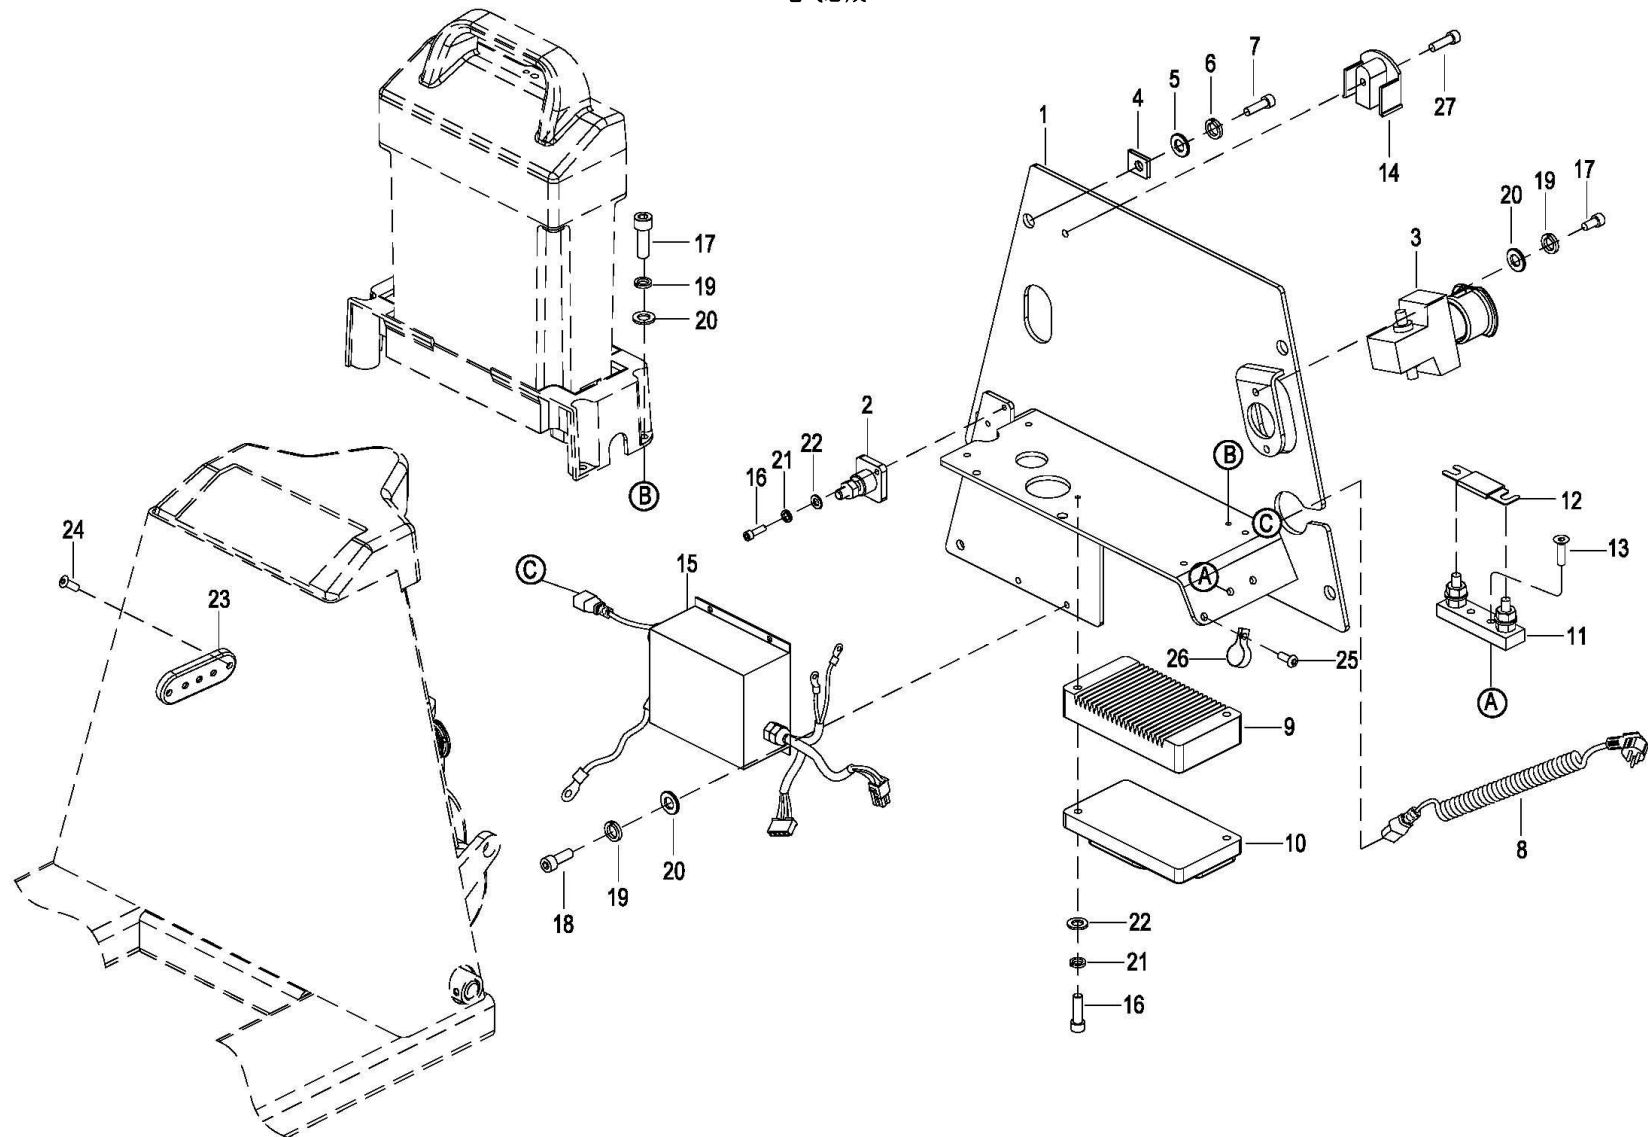

0501 Electrical Assembly


电气总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	1128-510000-D0	Bracket 电器支架	1		
2	1220-500005-00	Terminal 接线端	1		
3	1114-540000-00	Emergency Stop Switch 急停开关	1		
4	1120-120009-00	Clip 夹片	4		
5	0000-000105-00	Flatwasher ø8 平垫	4		
6	0000-000159-00	Lockwasher ø8 弹垫	4		
7	0000-000151-01	Screw M8x25 螺钉	4		
8	1115-500006-10	Charger Cable USA 充电线	1		For USA
8	1115-500006-20	Charger Cable AUS 充电线	1		For AUS
8	1115-500006-00	Charger Cable EUROPE 充电线	1		For EUROPE
8	1115-500006-40	Charger Cable JAPAN 充电线	1		For JAPAN
8	1115-500006-50	Charger Cable CHINA 充电线	1		For CHINA
8	1115-500006-30	Charger Cable END 充电线	1		For END
8	1115-500006-60	Charger Cable CH 充电线	1		For CH
9	1115-510005-0A	Finning 散热片	1		
10	1115-510004-00-90	Controller 控制器	1		
10	0000-001138-00	Screw M3x16 螺钉	2		
11	1120-540001-00	Fuse Stand 保险丝座	1		
12	1115-510003-00	Fuse 100A 保险丝100A	1		
13	0000-000090-00	Screw M6x12 螺钉	2		
14	1115-500011-0A	Clip 扣线夹	1		
15	1128-540000-D0	Charger 充电器	1		24V
16	0000-001029-00	Screw M4x12 螺钉	2		
17	0000-000031-00	Screw M5x8 螺钉	6		
18	0000-000004-00	Screw M5x12 螺钉	4		
19	304000000020	Lockwasher ø5 弹垫	10		

20		0000-000390-00	Flatwasher ø5	平垫	10		
21		0000-000122-00	Lockwasher ø4	弹垫	4		
22		0000-000702-00	Flatwasher ø4	平垫	4		
23		1113-500100-E0	Pilot Lamp	指示灯	1		
24		0000-001213-00	Screw M5x12	螺钉	2		
25		0000-001707-00	Screw M5x8	螺钉	1		
26		0000-001103-00	Coil	R 型线圈	1		
27		0000-001239-00	Screw M5x30	螺钉	1		

0502 Battery Assembly

电池总成

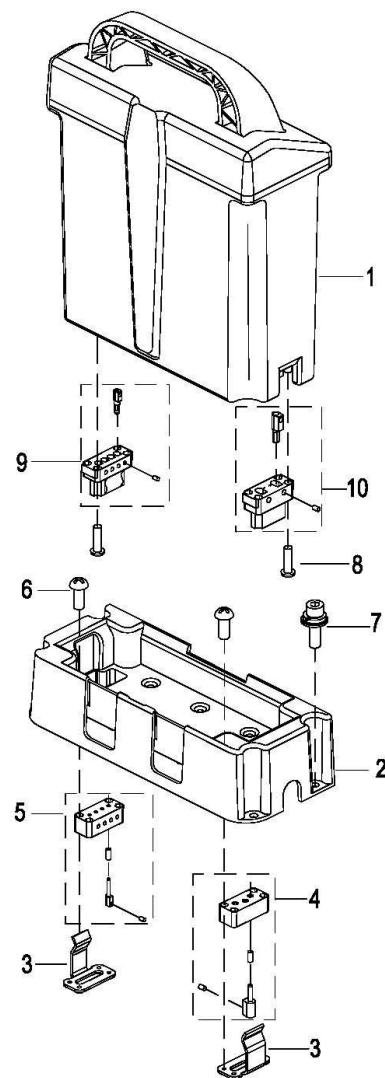


0502 Battery Assembly

电池总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	1113-513000-0E	Battery Pack 电池	1		24V/20Ah
2	1113-511001-00	Bracket 电池底座	1		
3	1113-511002-00	Splint 电池夹板	2		
4	1113-511011-00	Bracket Assembly 电源公头座总成	1		
5	1113-511010-00	Bracket Assembly 信号线公头座总成	1		
6	0000-001342-00	Screw M3x16 螺钉	8		
7	202800000094	Screw M5x10 组合螺钉	4		
8	0000-001631-00	Screw M3x14 螺钉	8		
9	LB00-00000Z-01	Bracket Assembly 信号线母头座总成	1		
10	LB00-00000Z-02	Bracket Assembly 电源母头座总成	1		

0503 Wiring Harness

线束

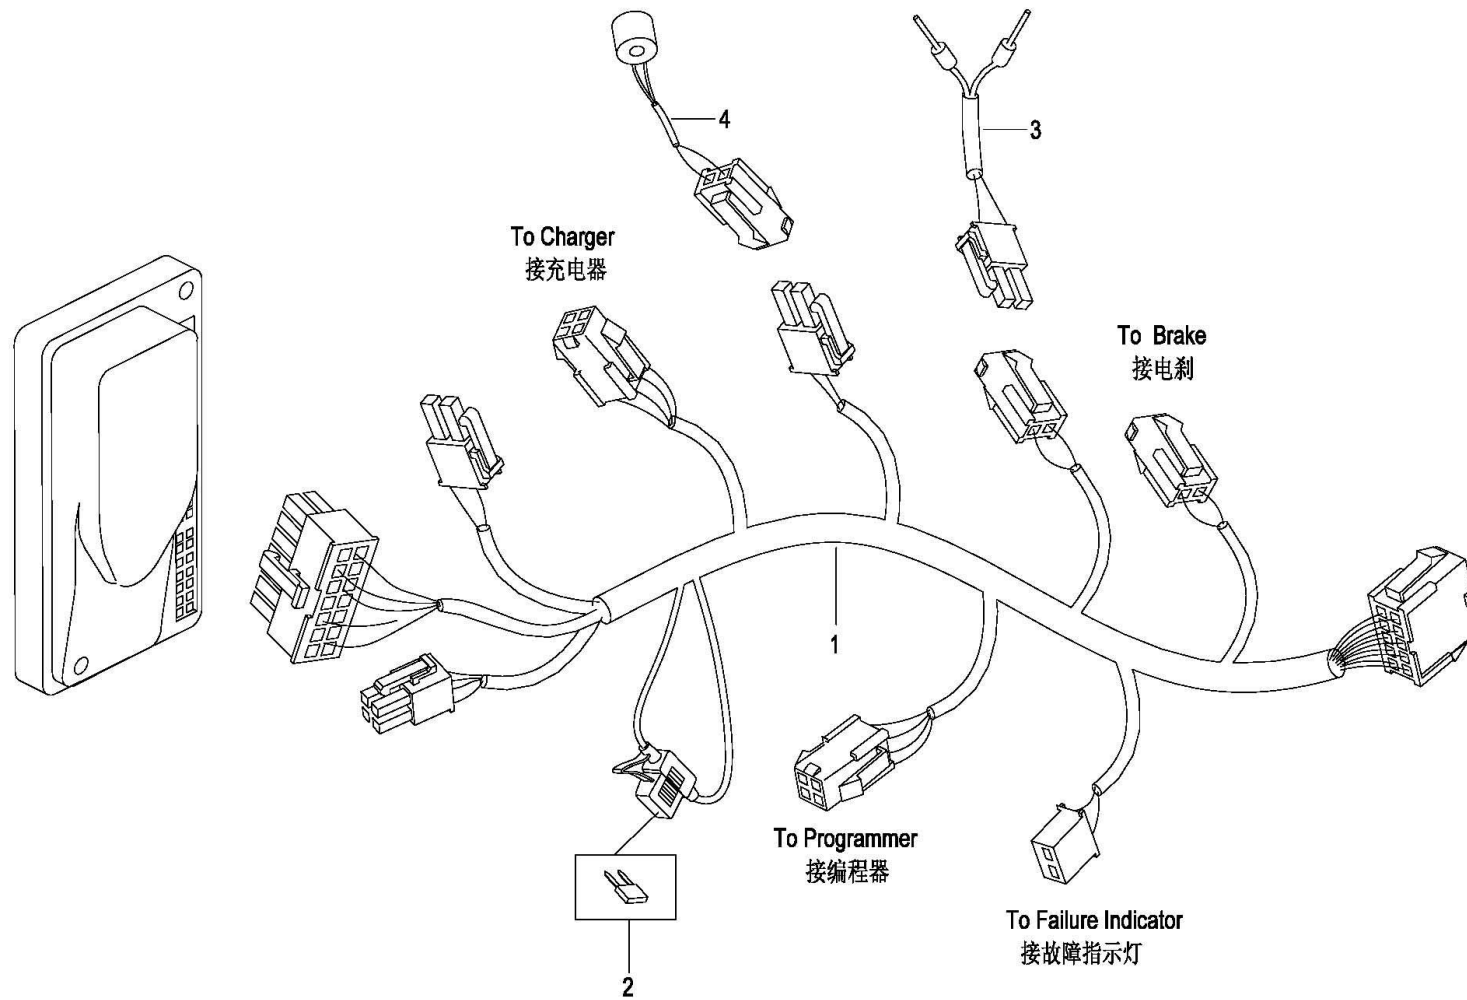


0503 Wiring Harness

线束

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	1128-520001-D0	Master Wiring Harness 主线束	1		
2	1113-520025-00	Fuse 5A 保险丝	1		
3	1128-520004-D0	Battery Signal Line 锂电池信号线	1		
4	1113-520006-00	Horn 喇叭线束	1		

0504 Cable Assembly

电缆总成

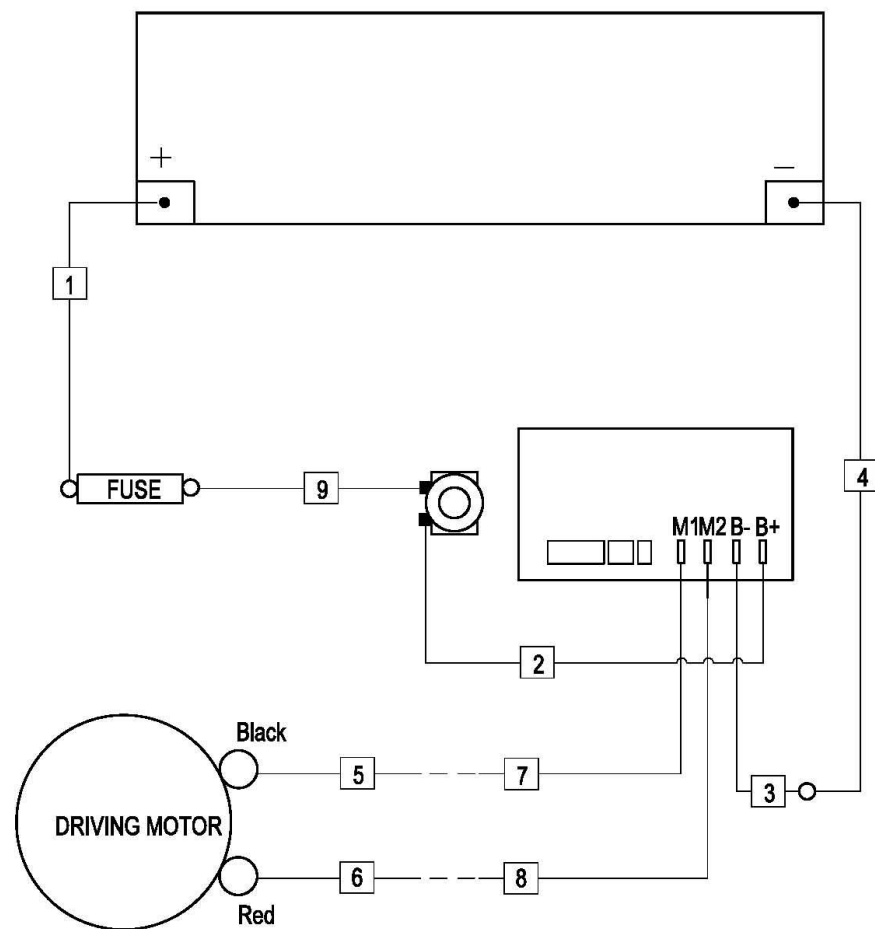


0504 Cable Assembly

电缆总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
1	1128-530006-00	Power cable+ 电缆电源正线	1		
2	1128-530001-00	Controller+ 控制器正极	1		
3	1128-530005-00	Controller- 控制器负极	1		
4	1128-530007-00	Power cable- 电缆电源负线	1		
5	1128-530003-00	Wire M1 M1线	1		
6	1128-530004-00	Wire M2 M2线	1		
7	1114-530003-A0	Wire M1 M1线	1		
8	1114-530004-A0	Wire M2 M2线	1		
9	1128-530002-D0	Fuse-Switch Cable 保险丝到急停开关	1		

0505 Charger Assembly

充电器总成

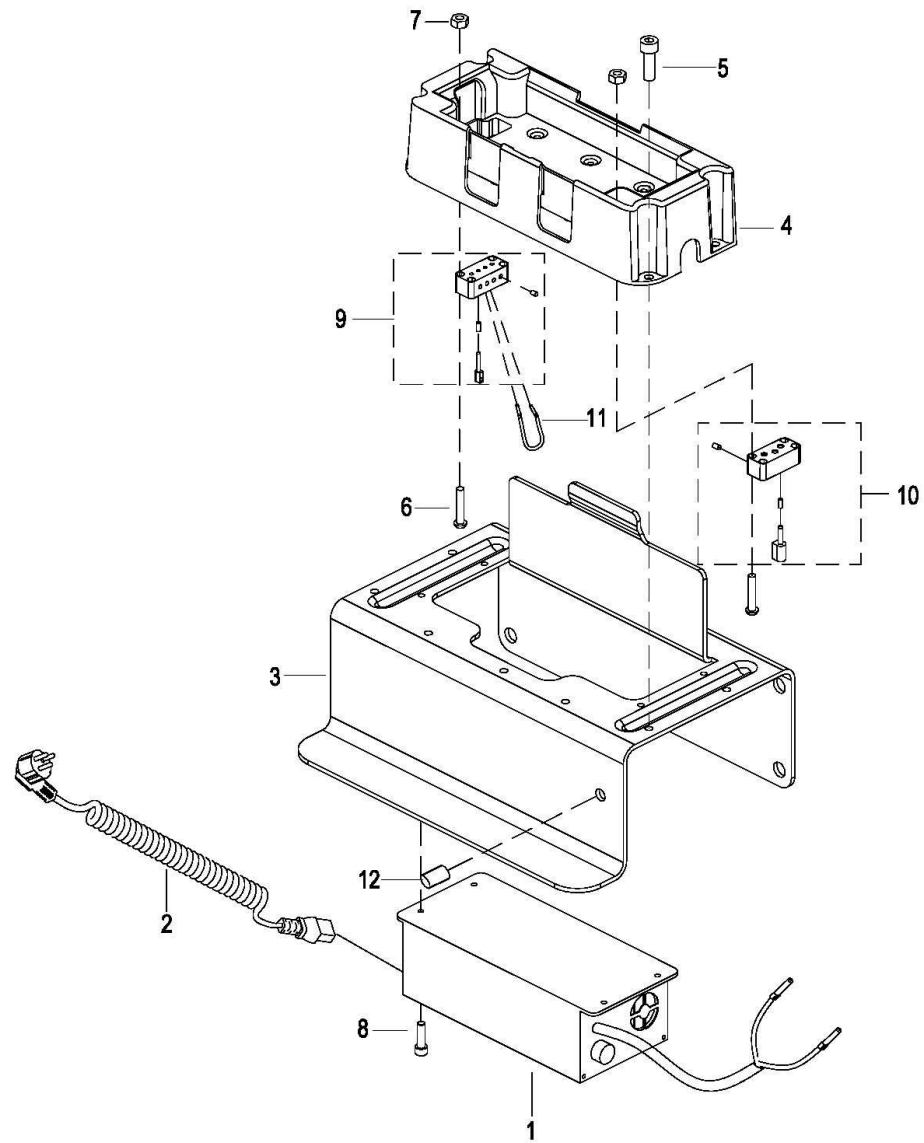

0505 Charger Assembly

充电器总成

Index 序号	Part No. 零件编号	Part Name 零件名称	No. 数量	Applied Date 适用日期	Remark 备注
0	1113-512000-00	Charger Assembly 充电器总成	1		Except pos #2
1	1113-512200-00	Charger 充电器	1		
2	1115-500006-10	Charger Cable USA 充电线	1		For USA
2	1115-500006-20	Charger Cable AUS 充电线	1		For AUS
2	1115-500006-00	Charger Cable EUROPE 充电线	1		For EUROPE
2	1115-500006-40	Charger Cable JAPAN 充电线	1		For JAPAN
2	1115-500006-50	Charger Cable CHINA 充电线	1		For CHINA
2	1115-500006-30	Charger Cable END 充电线	1		For END
2	1115-500006-60	Charger Cable CH 充电线	1		For CH
3	1113-512100-0A	Charger Bracket 充电器底座	1		
4	1113-511001-00	Bracket 电池底座	1		
5	0000-000902-00	Screw M6×25 螺钉	4		
6	0000-001342-00	Screw M3×16 螺钉	4		
7	0000-000982-00	Nut M3 螺母	8		
8	0000-001705-00	Screw M5×8 螺钉	4		
9	1113-511010-00	Bracket Assembly 信号线公头座总成	1		
10	1113-511011-00	Bracket Assembly 电源公头座总成	1		
11	1113-520017-00	Charging Short Wires 充电短接线	1		
12	1113-511012-00	Lampstandard 灯柱	1		