Error Codes for EP Electric Pallet Trucks



Address: Unit 4 Farm Rd, Buckingham Rd Ind Est, Brackley, Northants, NN13 7EA
Telephone 0800 619 0800 | Service@shs-handling.com | www.shshandlingsolutions.com

EPT20-15EHJ/18EHJ or EPT18-EHJ Error Codes		
Flash	Error Message	Explanation
Code	LITOI WIESSAGE	LAPIANACION
1-1	Thermal Fault	Over/under temperature cutback
1-2	Throttle Fault	Check controller, potentiometer out of range
1-3	Speed Pot Fault	Check controller
1-4	Undervoltage Fault	Lack of Power in system
1-5	Overvoltage Fault	Battery power to high
2-1	Main Off Fault	Controller issue
2-2	Switch Fault	Inching switch damaged or stuck in
2-3	Main Fault	Contactor in controller stuck
2-4	Main on Fault	Controller issue
3-1	Wiring Fault	Damage or short in wiring
3-2	Brake on Fault	Faulty brake or wiring
3-3	Pre-charge Fault	Damage to wiring and check brake
3-4	Brake Off Fault	Faulty brake or wiring
3-5	HPD Fault	Faulty Controller, lack of power
4-1	Current Sense Fault	Low power in system, damage to wiring
4-2	Hardware Failsafe	Low power in system, damaged controller
4-3	EE Checksum Fault	EE Checksum Fault
4-5	Battery Disconnect	Batteries faulty, wire between batteries, low power input into the
	Fault	controller